

BERNINA⁺

Brand	Model
(new style)	<p>with adapter #77 (manufactured post 1996) - 100, 120, 125 Activia, 125S, 130, 131, 135S, 140 Activia, 145 Activia, 145S, 150 QE Virtuosa, 153, 153QE, 155, 160 Virtuosa, 163 Virtuosa, 165 Artista, 170 Artista, 175, 180 Artista, 180E, 185, 190, 200 Artista, 200E, 210 Activia, 215, 220 Activia, 230 Activia, 230PE, 240 Activia, 330, 350PE, 380, 430 Aurora, 435, 440QE Aurora, 450 Aurora, 530, 540, 550QE, 560, 580, 590, 710, 630E Artista, 635LE, 640 Artista, 710, 720, 730E, 740, 750QE, 770, 770QE, 790, 810, 820, 830, 880</p>
(old style)	<p>with adapter #75 (manufactured pre 1998) - 530, 532, 534, 540, 600, 610, 640, 642, 644, 700, 707, 708, 709, 717, 718, 719, 730, 731, 732, 740, 741, 742, 744, 800, 801, 801S, 802, 802S, 803, 803S, 807, 808, 809, 810, 811, 817, 818, 819, 830, 831, 832, 840, 841, 842, 850, 900E, 910, 910N, 930, 931, 932, 940, 950, 1000, 1001, 1004, 1005, 1006, 1008, 1010, 1011, 1015, 1020, 1030, 1031, 1080, 1090, 1120, 1130, 1230, 1260, 1530, 1630</p>